



Latex 300 Printer Series

Site preparation guide

© 2013 Hewlett-Packard Development
Company, L.P.

1st edition

Legal notices

The information contained herein is subject to change without notice.

The only warranties for HP Products and services are set forth in the express warranty statement accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Table of contents

| | |
|---|-----------|
| 1 Overview | 1 |
| Introduction | 1 |
| Documentation | 2 |
| Customer responsibility | 2 |
| Installation time schedule | 2 |
| 2 Site preparation requirements | 3 |
| Physical space requirements | 3 |
| Unloading route | 3 |
| Environmental specifications | 4 |
| Ventilation and air conditioning | 4 |
| Designing the optimal print production area | 5 |
| RIP workstation characteristics | 5 |
| Networking | 6 |
| Printing supplies | 6 |
| Return the site preparation checklist | 6 |
| Electrical configuration | 7 |
| Single phase power | 7 |
| Circuit breakers | 7 |
| Wall receptacles and power cords | 8 |
| Powerline disturbances | 11 |
| Grounding | 12 |
| 3 Site preparation checklist | 13 |

1 Overview

Introduction

Your printer is supplied ready to use after a few simple installation procedures described in detail in the *Assembly instructions*. It is important to read the information provided in this guide thoroughly and to ensure complete compliance with all installation and operation requirements, safety procedures, warnings, cautions and local regulations. A well prepared site helps to provide a smooth and easy installation.

Documentation

The following manuals are provided with your printer, and can also be downloaded from <http://www.hp.com/go/Latex300/manuals/>.

- Introductory information
- Limited warranty
- Legal information
- Site preparation guide (this guide)
- Assembly instructions
- User's guide

Customer responsibility

You are responsible for preparing the physical site for the installation of the printer.

- Prepare the building's electrical system to meet the printer's requirements and the Electrical Code requirements according to the local jurisdiction of the country where the equipment is installed. See [Electrical configuration on page 7](#).



NOTE: Make sure that a certified electrician reviews the setup and configuration of the electrical system used to power the printer. See [Electrical configuration on page 7](#).

- Meet temperature and humidity requirements and ensure proper ventilation for the printer. See [Environmental specifications on page 4](#).
- Meet all requirements for RIP, networking and printing supplies. See [RIP workstation characteristics on page 5](#), [Networking on page 6](#) and [Printing supplies on page 6](#).
- Prepare the unloading route so the printer can be unloaded and maneuvered into place. See [Unloading route on page 3](#).

Installation time schedule

Allow a minimum of three hours for the installation. The installer may require the help of three people to perform certain tasks during installation.

2 Site preparation requirements

Physical space requirements

Unloading route


The route between the unloading area of the printer and the installation site, including any corridors and doorways through which the printer must be transported, is important to proper site preparation and must be checked before the arrival of the printer. This pathway must be clear when the printer arrives.

Table 2-1 Printer physical specifications


| | 310 Printer | 330 Printer | 360 Printer |
|-----------------------|--------------------|--------------------|--------------------|
| Width | 2307 mm (90.8 in) | 2561 mm (101 in) | 2561 mm (101 in) |
| Depth | 840 mm (33.07 in) | 840 mm (33.07 in) | 840 mm (33.07 in) |
| Height | 1380 mm (54.3 in) | 1380 mm (54.3 in) | 1380 mm (54.3 in) |
| Weight | 174 kg (383.6 lb) | 188 kg (414.5 lb) | 207 kg (456.4 lb) |
| Width with packaging | 2541 mm (100 in) | 2795 mm (110 in) | 2795 mm (110 in) |
| Depth with packaging | 765 mm (30.1 in) | 765 mm (30.1 in) | 765 mm (30.1 in) |
| Height with packaging | 1239 mm (48.8 in) | 1239 mm (48.8 in) | 1239 mm (48.8 in) |
| Weight with packaging | 290 kg (639.3 lb) | 304 kg (670.2 lb) | 323 kg (712.1 lb) |

Doorways: minimum width 1.01 m (40 in) × minimum height 1.67 m (66 in) required.

The space required for assembly is 3 m (10 ft) in front and 1 m (3.5 ft) at the sides and rear.

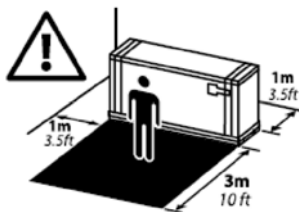

Most of the installation process requires one person, but four people are required to perform certain tasks.





Environmental specifications

These environmental conditions must be kept within the specified ranges to ensure the correct operation of the printer. Failure to do so may cause print-quality problems or damage sensitive electronic components.

Table 2-2 Printer environmental specifications

| | |
|--|--|
| Relative humidity range for best print quality | 40–60%, depending on substrate type |
| Relative humidity range for printing | 20–80%, depending on substrate type |
| Temperature range for best print quality | 20 to 25°C (68 to 77°F), depending on substrate type |
| Temperature range for printing | 15 to 30°C (59 to 86°F) |
| Temperature range when not in operation | -25 to +55°C (-13 to +131°F) |
| Temperature gradient | no more than 10°C/h (18°F/h) |
| Maximum altitude when printing | 3000 m (10000 ft) |

 **NOTE:** The printer must be kept indoors.

 **NOTE:** If the printer or ink cartridges are moved from a cold location to a warm and humid location, water from the atmosphere can condensate on the printer parts and cartridges and can result in ink leaks and printer errors. In this case, HP recommends that you wait at least 3 hours before turning on the printer or installing the ink cartridges, to allow the condensate to evaporate.

In addition to controlling the temperature, humidity, and temperature gradient, there are other environmental conditions that must be met during site preparation.


- Do not install the printer where it will be exposed to direct sunlight or a strong light source.
- Do not install the printer in a dusty environment. Remove any accumulated dust before moving the printer into the area.


Ventilation and air conditioning

As with all equipment installations, to maintain ambient comfort levels, air conditioning or ventilation in the work area should take into account that the printer produces heat. Typically, the printer's power dissipation is 4.6 kW (15.7 kBTU/h) for HP Latex 360, 2.6 kW (8.9 kBTU/h) for HP Latex 330 and 2.2 kW (7.5 kBTU/h) for HP Latex 310. Air conditioning and ventilation should meet with local environmental, health and safety (EHS) guidelines and regulations. Consult your usual air conditioning or EHS specialist for advice on the appropriate measures for your location.

For a more prescriptive approach to adequate ventilation, you could refer to the ANSI/ASHRAE (American Society of Heating, Refrigerating and Air-Conditioning Engineers) 62.1-2007 Ventilation for Acceptable Indoor Air Quality. As an example, a minimum exhaust rate of 2.5 L/s.m² (0.5 cfm/ft²) of fresh make up air for "copy, printing rooms" is specified.

Special ventilation equipment (air filtration) is not required to meet U.S. OSHA requirements on occupational exposure to VOCs from water-based HP Latex Inks. Special ventilation equipment installation is at the discretion of the Customer. Customers should consult state and local requirements and regulations.

 **NOTE:** The ventilation and air conditioning units should not blow air directly onto the printer.

 **NOTE:** Maintaining positive air pressure in the print production room will help prevent dust from entering the room.

Designing the optimal print production area

Your printer requires enough space to perform the following tasks:


- Print
- Replace a substrate roll
- Service the printer or replace printer components
- Ensure the printer is well ventilated

Your printer has the following dimensions:

Table 2-3 Printer physical specifications

| | 310 Printer | 330/360 Printer |
|--------|--------------------|------------------------|
| Width | 2307 mm (90.8 in) | 2561 mm (101 in) |
| Depth | 840 mm (33.07 in) | 840 mm (33.07 in) |
| Height | 1380 mm (54.3 in) | 1380 mm (54.3 in) |

The space required is illustrated in the following diagram:

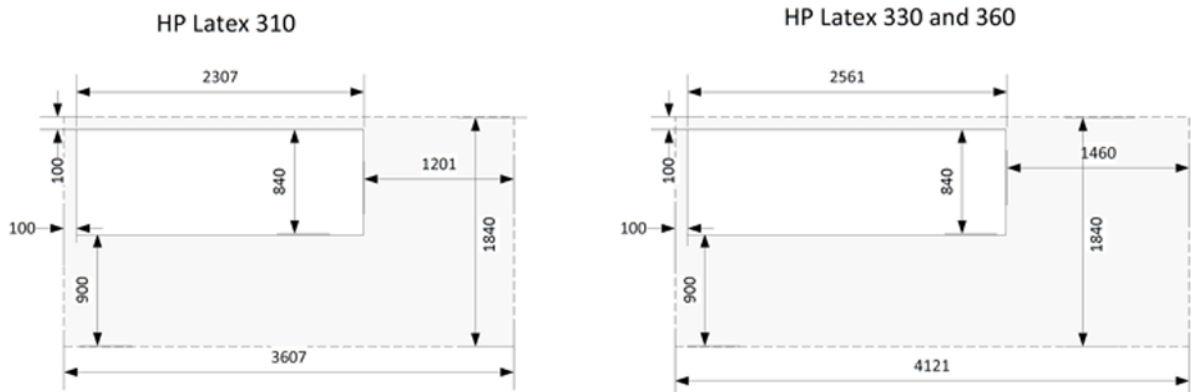

RIP workstation characteristics

Each RIP has specific requirements. Check with your RIP vendor to find out the requirements for the PC that you'll be using for the RIP station. See <http://www.hp.com/go/latexrips> for a complete list of certified RIP stations available for this printer. Make sure that the RIP station is fully functional and ready for installation.

Networking

You are responsible for all networking requirements, and you must complete the following tasks:



NOTE: In order to perform remote support, the printer must have access to the Internet using the LAN connection.

- Have a Gigabit Ethernet network ready for the day of installation.
- Provide a CAT-6 LAN cable to connect the printer to your LAN and RIP workstation.
- Provide a Gigabit Ethernet switch.

To get the full features for your printer, it should be connected to the Internet. Most unmanaged networks are directly connected to the Internet. However, some networks require a web proxy. A proxy is a server that acts as an intermediary between computers on your local network and servers on the internet. Before setting up the printer, please check if your network requires a web proxy.

To check this open Internet Explorer or Safari on any computer within your network, and browse to the <http://hp.com> site. If you cannot connect to hp.com, your network does not have internet access and you need to consult with your IT provider on how to configure internet access. If you can connect to hp.com, you can check the browser settings for proxy configuration as follows:

- For Internet Explorer, go to Tools > Internet Options > Connections > Local Area Network (LAN) Settings. In the "Proxy server" part of the window, if the "Use a proxy server" box is unchecked, you do not need a web proxy. If it is checked, make a note of the Address and Port settings in the main window, or in the HTTP part of the Advanced settings window.
- For Safari, go to Preferences > Advanced > Proxies > Change Settings. If the "Web Proxy (HTTP)" box is unchecked, you do not need a web proxy. If it is checked, make a note of the Web Proxy Server name (before the ":") and port (after the ":").
- Proxy server names are typically like "proxy.mycompany.com" and proxy port is typically 80, but details are network dependent.

If you are unable to determine whether you need a web proxy or how to configure it, please consult with your network administrator or Internet Service Provider. When in doubt, you probably do not need a web proxy.

Printing supplies

The following supplies should be purchased in addition to the printer and should be available on the day of installation:

- Six HP 831 ink cartridges, one for each color: black, cyan, magenta, yellow, light cyan and light magenta, and one HP 831 optimizer cartridge.
- At least one roll of substrate to perform calibrations and printhead alignment during printer setup.


Return the site preparation checklist

The checklist must be completed and returned to your reseller or service representative a minimum of two weeks before the day of installation.



NOTE: Any delays during installation that are caused by an unprepared site will be charged to the customer. Take care that your site is properly prepared to ensure a smooth and easy installation.

Electrical configuration

 **NOTE:** If configuration of the building electrical system used to power the printer needs to be modified to meet printer requirements, an electrician is required. Make sure that your electrician is appropriately certified according to local regulations and supplied with all the information regarding the electrical configuration.


Your printer requires the following electrical components to be supplied and installed by the customer, according to the Electrical Code requirements of the local jurisdiction of the country where the equipment is installed.

Single phase power

Table 2-4 Single phase line specifications

| | HP Latex 360 | | HP Latex 330 | | HP Latex 310 | |
|---|--|--------|--------------|--------|--------------|--------|
| | Printer | Curing | Printer | Curing | Printer | Curing |
| Number of power cords | 2 | | 2 | | 2 | |
| Input voltage | ~200-240 V +/-10% (two wires and protective earth) | | | | | |
| Input frequency | 50 / 60 Hz | | | | | |
| Maximum load current (per power cord) | 16 A | 16 A | 3 A | 16 A | 3 A | 13 A |
| Power consumption per power cord in printing mode | 2.5 kW | 2.1 kW | 200 W | 2.4 kW | 200 W | 2.0 kW |
| Power consumption in ready mode | 85 W | | 72 W | | 70 W | |

Circuit breakers

 **NOTE:** The circuit breakers must meet the requirements of the printer and shall be in accordance with the Electrical Code requirements of the local jurisdiction of the country where the equipment is installed.

The printer requires two Power Cords that meet the following requirements.

Table 2-5 Dedicated lines per SKU


| | HP Latex 360 | | HP Latex 330 | | HP Latex 310 | |
|------------------------|---|--------|---|--------|---|---|
| | Printer | Curing | Printer | Curing | Printer | Curing |
| Dedicated line | Yes | Yes | Not required. Do not overload lines. Refer to Table 2-4 | Yes | Not required. Do not overload lines. Refer to Table 2-4 | Not required. Do not overload lines. Refer to Table 2-4 |
| Branch circuit breaker | 2 poles, 16 A/20 A according to Local Laws and printer maximum load current | | | | | |

Table 2-5 Dedicated lines per SKU (continued)

| | HP Latex 360 | HP Latex 330 | HP Latex 310 |
|---|---|--------------|--------------|
| Residual current circuit breaker (1) ^{footnote1963} | Required | Recommended | Recommended |
| | 2 poles, 30 mA residual, at least 20 A capacity | | |

(1) Also known as Ground Fault Circuit Interrupter (GFCI)

Figure 2-1 Electrical configuration diagram (for reference only)

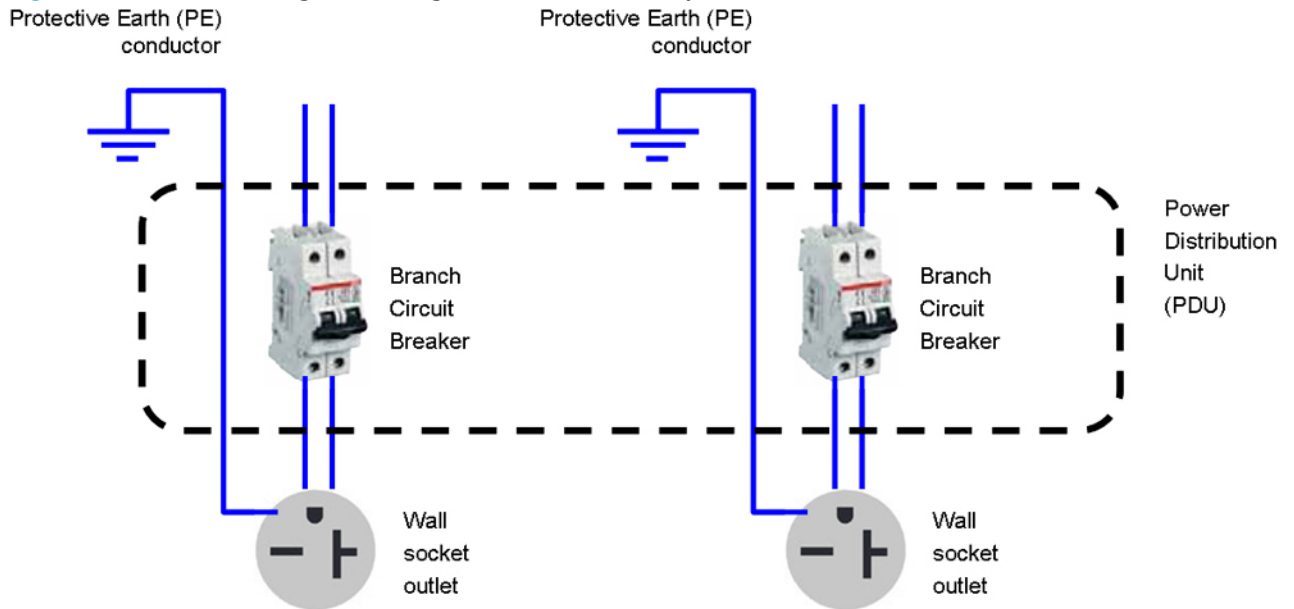

NOTE: The Power Distribution Unit (PDU) must be rated to meet the power requirements of the printer, and shall be in accordance with the Electrical Code requirements of the local jurisdiction of the country where the equipment is installed.

WARNING! Do not use a power strip (relocatable power tap) to connect both power cords.

Wall receptacles and power cords

Two power cords are provided with your printer, according to the printer's electrical specifications. If those cords do not reach your PDU and/or UPS, a certified electrician must install suitable extension cables on the day of installation.

To make sure you have the right wall socket outlets (wall receptacles) ready for installation, check the following:



1. The wall socket outlets must be suitable for **printer input ratings**. See [Single phase power on page 7](#).
2. The wall socket outlets must be suitable for the **power cord plug type** used in the country of installation. The [Table 2-6 HP Latex 330/360 Printers— Printer power cord specifications on page 9](#) list examples of the power cords and the plugs provided with the printer according to the country. To

make sure you have the right wall receptacle, find your country in the appropriate table and check the **plug type**.

⚠ WARNING! Use only use the power cord supplied by HP with the printer. Do not use a power strip (relocatable power tap) to connect both power cords. Do not damage, cut or repair the power cord. With a damaged power cord, there is risk of fire and electric shock. Always replace a damaged power cord with an HP-approved power cord.

Table 2-6 HP Latex 330/360 Printers— Printer power cord specifications

NOTE: For HP Latex 330/360 Printers— Use two power cords from below

| Country | HP Part Number * | Length | Plug type | Plug |
|---|------------------|--------|--------------------------------------|---|
| USA, Canada, Mexico, Japan, Philippines, Thailand | 8120-6893 | 4.5 m | NEMA 6-20P, 240 V, 20 A, non-locking |  |
| International | 8120-6897 | 4.5 m | IEC 60309, 240 V, 16 A, 2L +PE |  |

* Alternative part numbers are valid with the same specifications and markings.

Table 2-7 HP Latex 310 Printer — Power cord specifications per region

NOTE: For HP Latex 310 Printer — Use two power cords from below





| Country | HP Part Number * | Length | Plug type | Plug |
|--------------------------------------|------------------|--------|--------------------------------------|---|
| America Region | | | | |
| Argentina | 8120-6897 | 4.5 m | IEC 60309, 240V, 16A, 2L+PE |  |
| Brazil | 8121-110 | 2.5 m | NBR 14136 |  |
| Chile, Uruguay | 8121-0923 | 2.5 m | CEI 23-50 |  |
| USA, Canada, Mexico | 8120-6360 | 2.5 m | NEMA 6-20P, 240 V, 20 A, non-locking |  |
| Asia Pacific and Japan Region | | | | |

Table 2-7 HP Latex 310 Printer — Power cord specifications per region (continued)

















| NOTE: For HP Latex 310 Printer — Use two power cords from below | | | | |
|--|-------------------------|---------------|--------------------------------------|---|
| Country | HP Part Number * | Length | Plug type | Plug |
| Australia/New Zealand | 8120-6351 | 2.5 m | AS/NZS 3112-3 (15A) |  |
| China | 8121-0924 | 2.5 m | GB 1002 (16A) |  |
| Korea, Indonesia | 8120-6352 | 2.5 m | CEE 7-VII |  |
| India | 8121-1074 | 2.5 m | IS 1293 |  |
| Taiwan | 8121-1033 | 4.5 m | CNS 690 |  |
| Hong Kong, Singapore | 8120-6898 | 4.5 m | BS 1363/A (13A fused) |  |
| Japan, Philippines, Thailand | 8120-6360 | 2.5 m | NEMA 6-20P, 240 V, 20 A, non-locking |  |
| Europe, Middle East and Africa Region | | | | |
| Europe Russia | 8120-6352 | 2.5 m | CEE 7-VII |  |
| Denmark | 8121-1077 | 2.5 m | DK 2-5A |  |


Table 2-7 HP Latex 310 Printer — Power cord specifications per region (continued)

| NOTE: For HP Latex 310 Printer — Use two power cords from below | | | | |
|--|------------------|--------|--------------------------------------|--|
| Country | HP Part Number * | Length | Plug type | Plug |
| Israel | 8121-1010 | 2.5 m | SI 32 |  |
| South Africa | 8121-0915 | 2.5 m | SABS 164 |  |
| Switzerland, Liechtenstein | 8120-6897 | 4.5 m | IEC 60309, 240 V, 16 A, 2L+PE |  |
| U.K. | 8120-6898 | 4.5 m | BS 1363/A (13A fused) |  |
| Middle East | 8120-6360 | 2.5 m | NEMA 6-20P, 240 V, 20 A, non-locking |  |

* Alternative part numbers are valid with the same specifications and markings.

Table 2-8 Appliance coupler (printer connection)

| Country | Appliance coupler (power cable) | Appliance coupler inlet (printer) |
|---------|---|---|
| All | Detachable terminal as per IEC60320-1 C19 (squared type) | Detachable inlet as per IEC60320-1 C20 (squared type) |
| |  C19 |  C20 |

 **NOTE:** Place the wall receptacle close enough to the printer so the plug can be plugged and unplugged easily.

Powerline disturbances

As with all computer and electronic equipment, reliable operation of your printer depends on the availability of relatively noise-free AC power.

- In order to ensure optimum performance and reliability, your printer should be protected from variations in line voltage. Lightning, line faults or the switching of lighting or machinery can generate line transients that far exceed the peak value of the applied voltage. If not reduced, these microsecond pulses can disrupt system operation and damage the printer.
- It is recommended to include overvoltage (OVP) and transient protection in the power supply to the printer.
- All electrical noise-generating equipment, such as fans, fluorescent lighting and air-conditioning systems, should be kept separate from the power source used for your printer.

Grounding

The printer must be connected to a good-quality ground line in order to avoid electrical risk. Please note your obligation to comply with the Electrical Code requirements of the local jurisdiction of the country where the equipment is installed.

The following grounding tasks must be fulfilled to meet the site preparation requirements:

- Grounding wires must be insulated and at least equal in size to the phase conductors.
- Ground impedance must be less than 0.5Ω or comply with the Electrical Code requirements of the local jurisdiction of the country where the equipment is installed.

3 Site preparation checklist

| Safety requirements | Yes | No | Comments |
|--|-----|----|------------|
| Do those who will operate the printer have the technical training and experience necessary to be aware of hazards to which they may be exposed in performing a task, and to take appropriate measures to minimize the risks? | | | (Required) |
| Is there an emergency exit in the print production area, with easy access and free from any obstruction? | | | |

| Electrical installation requirements | Yes | No | Comments |
|--|-----|----|--|
| Is the electrician aware of all requirements and specifications highlighted in this guide? | | | (Required) |
| Is the single-phase line voltage inside the specified voltage range 200-240 V +/-10%? | | | (Required) Specify nominal mains voltage: |
| Are there the dedicated lines to connect printer's power cords, if required? NOTE: Do not use a power strip (relocatable power tap) to connect both power cords. | | | (Required) |
| Have branch circuit breakers (2 poles, 16 A/20 A general) been correctly installed for each dedicated line? | | | (Required) |
| Have the Residual Current Circuit Breaker (also known as Ground Fault Circuit Interrupter) (2 poles, 30 mA residual, at least 20A capacity) been correctly installed if required or recommended? | | | (Required) |
| Is the Power Distribution Unit (PDU) correctly installed? | | | (Required) |
| Are the grounding conductors properly installed for each wall receptacle (wall socket)? | | | (Required) |
| Are the wall receptacles (wall sockets) suitable for the power cord plug type provided by HP? | | | (Required) |
| Are the wall receptacles (wall sockets) and electrical installation suitable for the printer's rated current ? NOTE: See Table 2-4 for specific information. | | | (Required) |
| Are the wall receptacles (wall sockets) placed close enough to the printer that the plugs can be plugged and unplugged easily? NOTE: See Table 2-6 and 2-7 for specific information. | | | (Required) |

| Electrical configuration requirements | Yes | No | Comments |
|---|------------|-----------|-----------------|
| Do you need an Uninterrupted Power Supply (UPS) or step-up transformer? If so, is it correctly installed? | | | |

| Networking and computer requirements | Yes | No | Comments |
|--|------------|-----------|-----------------|
| Is the RIP computer and software ready for installation? | | | |
| Have network connections been supplied? | | | |
| Do you need a web proxy? If so, write down proxy server name and port. | | | |
| Do you have a color sensor that is compatible with your RIP? | | | |
| Do you have a LAN cable long enough to connect the printer to the network? | | | |

| Environmental requirements | Yes | No | Comments |
|---|------------|-----------|-----------------|
| Have the temperature and humidity requirements been satisfactorily met in the print production area, and is there adequate ventilation or air conditioning? | | | |
| Have the temperature and humidity requirements been satisfactorily met in the storage area? | | | |
| Is the print production area free from dirt and dust? | | | |
| Does the print production area have sufficient lighting? | | | |

| Other requirements | Yes | No | Comments |
|---|------------|-----------|-----------------|
| Have you arranged for supplies such as substrate and ink cartridges to be available on the day of installation? | | | |
| Have you met the requirements specified in this guide? | | | (Required) |

Date of site preparation completion

Site preparation guide edition number or copyright date

Customer signature
